


AmbiCloud Air

Aroma Diffuser – Product Manual

PRODUCT MANUAL

Aroma Diffuser

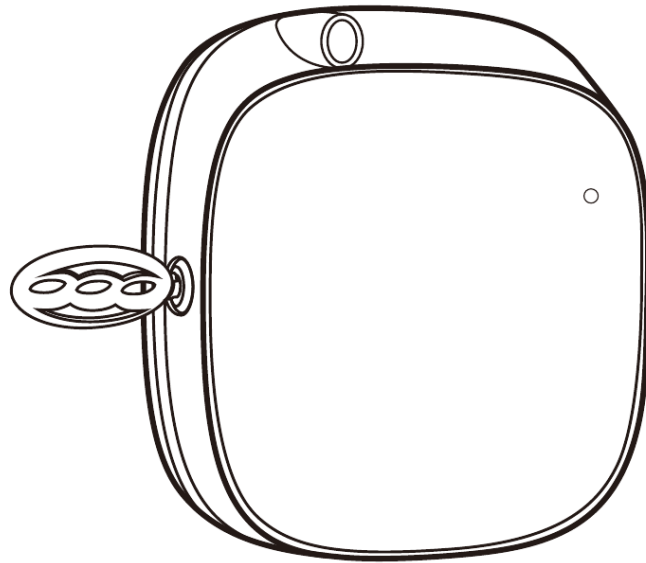

Scent marketing



Android system



IOS system


If the QR code cannot be scanned, please search for "Scent Marketing" in Google play or APP store.

☒ BT

☒ V3.1

01 Specification

Model	A1
Size	148*58*158mm
Bottle	100ml
Input	USB 5V — 0.3A MAX
Power	1.5W
Coverage	30m ² /90m ³ /3200ft ³
N.W.	0.59kg
Material	plastic, acrylic

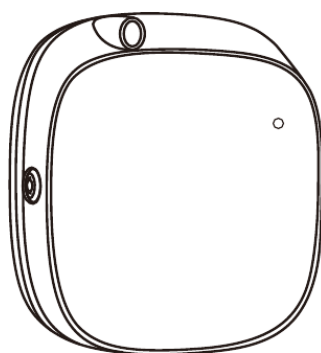

bottle



key




screws




manual


mounting
bracket

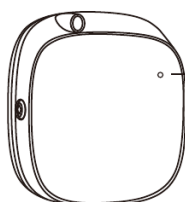Type C cable
(optional)


Bluetooth indicator:


- Catch the signal - Flash
- Connected - Light on
- Disconnected - Light off

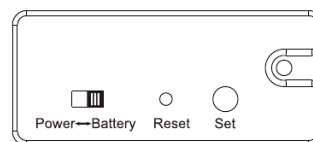
Bluetooth
indicator

Power mode

Battery mode

Reset button

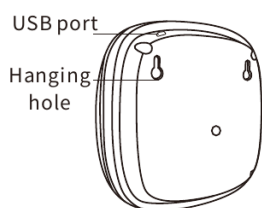Level detector
reset button


USB port

Hanging
hole

Fixed buckle




Key Lock parts



Key


Lock parts

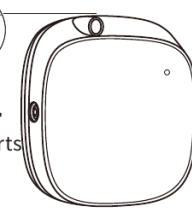

Bluetooth indicator

Diffuser head

Bottle

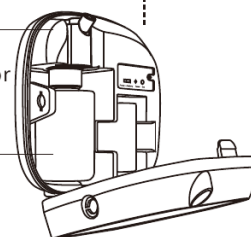


02 Bluetooth Instruction

Where to get the app:

Please search for "scent marketing" in Google play or App store.

Note:

1. Please make sure that the Bluetooth function is turned on.
2. Please make sure that the location function of the mobile phone is turned on.

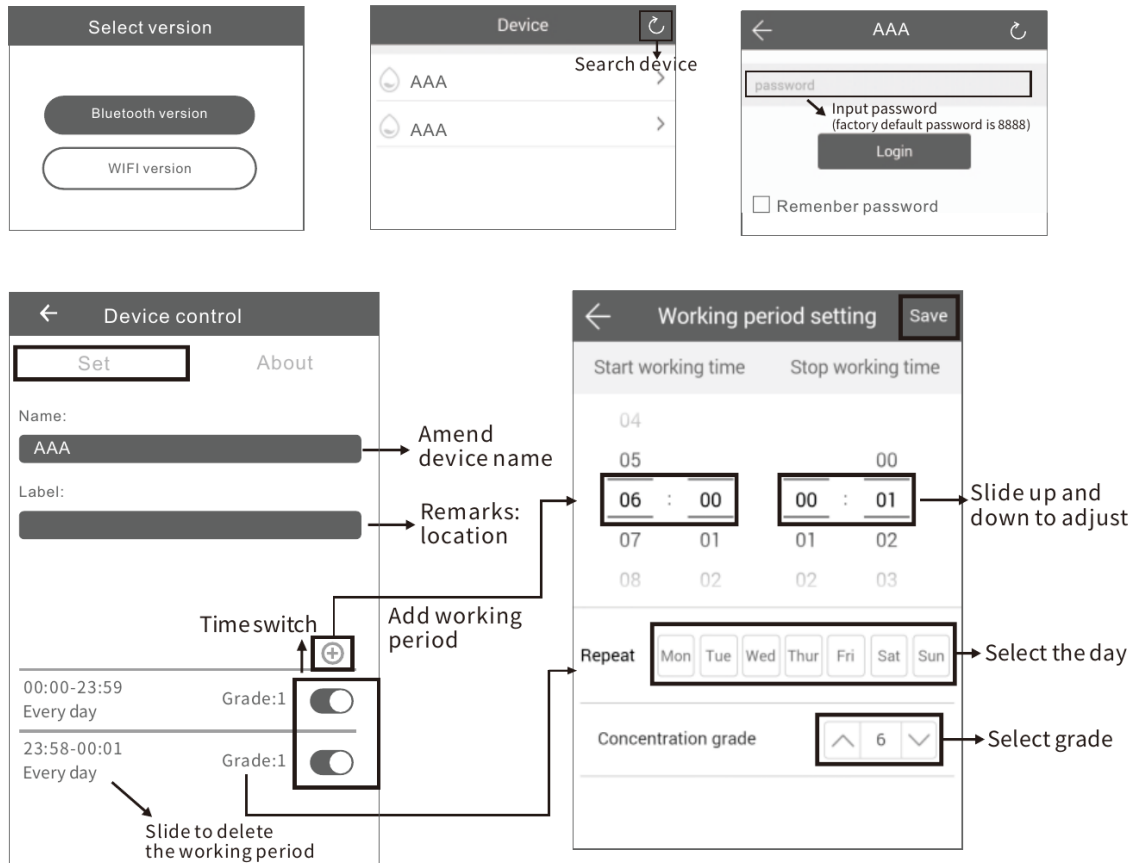

Amend Password

Go to "Device control" → "About", then tap "Change password".

1. Enter the new password.
2. Confirm the new password.
3. Tap "Change password" to save.

Note: If you forget the password, please press the reset button to restore the factory setting. The factory settings password is 8888.

03 Installation Step

1. Insert the key and the mating part, twirl to "unlock" and then pull them out. Press the fixed button on the top and push forward.
2. Tightly connect the atomizer head and the fragrance bottle, and install them to the machine.
3. Choose "Power mode" or "Battery mode", plug in or insert the battery. (Please wait about 4 minutes to let the machine charge on the first time connecting to power.)
4. Insert the key to the mating parts, then insert them into the keyhole, twirl to "lock" for locking.

Wall-mounted Installation

1. Drill the 3 screws into the wall.
2. Hang the machine on the screws.

A short video tutorial for the wall-mounted installation is available via the QR code in the original manufacturer manual.

Key Points for Using Invisible Adhesive Strips

1. Wipe the tile surface with alcohol to remove grease, dust, and water stains, and ensure the bonding surface is completely dry.
2. Avoid tile joints, uneven or damaged areas; choose smooth, intact tile surfaces for pasting.
3. After peeling off the release paper, slowly attach the strip to the wall from one end. Use a scraper (or flat object) to press from the center outward, pushing out any air bubbles.
4. Avoid using in areas with long-term high temperatures ($>60^{\circ}\text{C}$), direct water spray (e.g., under a showerhead), air conditioning vents, or other locations that may reduce adhesion.
5. Check the edges of the adhesive strips monthly. If any lifting or gaps are found, reinforce or replace them.

04 Concentration and Consumption

Grade	Work time(s)	Stop time(s)	Consumption(g/h)
G1	3s	900s	0.04
G2	3s	810s	0.05
G3	3s	720s	0.06
G4	3s	630s	0.07
G5	3s	540s	0.08
G6	3s	450s	0.13
G7	3s	360s	0.19
G8	3s	270s	0.24
G9	3s	180s	0.30
G10	3s	90s	0.35

Notes:

- 100ml oils can diffuse 6300–6700 times under normal circumstances.
- All of the above grade atomization work times are 3 seconds.
- Different grades and oils may result in different consumption.

05 Warning

1. Please keep the machine vertical. Tilting or lying it flat may cause oil overflow and the machine's efficiency may be affected.
2. Do not modify, disassemble, or repair the machine. If any failure happens to the machine, please contact our technical personnel.
3. Do NOT use a quick charger for this device.
4. When the machine is first used, or hasn't been used for more than 7 days, the controlling board is out of power. Please insert the batteries and wait for 4 minutes — the machine will then resume automatically.

06 Troubleshooting

Before asking to have the machine repaired, please try to diagnose the problem first following the instructions below.

Breakdown	Solution
Does not diffuse	Check whether the mode you chose is correct. Check if the machine is in a "Non-Working period". The air pump may be damaged — change it for a new one. Check whether the tube is loose.
Low diffuse	Use a cotton swab to wipe alcohol on the atomizing core hole, then atomize with alcohol for 10s (recommended every 1 month). Check whether the gasket is damaged or loose. Check whether the tube is loose.
Oil spill	Check whether the bottle is loose. The gasket in the atomized head may be damaged or loose.
Oil sprinkle	The atomized head is damaged — change it for a new one. The machine is tilted or lying down — keep the machine vertical.
Abnormal noise	The air pump is loose — retighten it. The air pump is damaged — change it for a new one.

07 Equipment Cleaning

The machine needs to be cleaned in the following situations:

1. You're about to change to another kind of essential oil.
2. The atomization volume becomes weak.

Tip: We recommend regular cleaning — about once every month.

Cleaning Steps

1. Pull out the atomized head and loosen the bottle.
2. Find a larger container and fill it with industrial alcohol, then soak the atomized head and the bottle for 5–10 minutes.
3. Air-dry the atomized head and the bottle.

Note: After cleaning the device, turn on the unit and press and hold the SET button for 3 seconds to reset the remaining oil level. Please clean the metal frame promptly to prevent potential discoloration or corrosion caused by essential oil contact.