


Product Manual

Aroma Diffuser

70.405 — AmbiCloud Pro

Ver 6.0

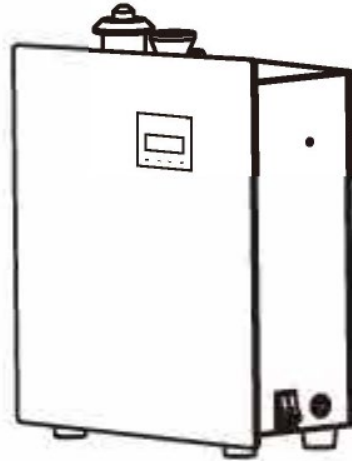

Scent marketing



Android system



IOS system

If the QR code cannot be scanned,
please search "Scent Marketing" in App store (IOS
user) or Google Play(Android user) directly.

Concentration & Consumption

Grade	Consume (g/h)			Concentration	
	70.403 (150ml bottle)	70.405 (500ml bottle)	SA600 (1000ml bottle)	Working(s)	Stop(s)
G1	0.07	0.10	0.30	15s	300s
G2	0.15	0.23	0.53	15s	150s
G3	0.23	0.36	0.76	20s	120s
G4	0.31	0.49	0.99	20s	85s
G5	0.39	0.72	1.22	25s	80s
G6	0.47	0.85	1.45	30s	75s
G7	0.55	0.98	1.67	30s	60s
G8	0.63	1.11	1.90	30s	50s
G9	0.71	1.24	2.13	30s	40s
G10	0.80	1.37	2.36	30s	33s
G11	0.88	1.50	2.49	33s	30s
G12	0.96	1.63	2.72	40s	30s
G13	1.04	1.76	2.95	50s	30s
G14	1.12	1.89	3.18	60s	30s
G15	1.20	2.02	3.41	75s	30s
G16	1.28	2.15	3.64	80s	25s
G17	1.36	2.28	3.87	85s	20s
G18	1.44	2.36	4.10	120s	20s
G19	1.52	2.41	4.30	150s	15s
G20	1.60	2.50	4.50	300s	15s
Customized	---	---	---	5-500s	5-500s

Note:

1. The above data are tested based on the test oil.
2. The above data is for reference only, and the amount of atomization produced by different essential oils may be different.

Specification

Model	70.405
Size	230 x 313 x 90mm
N.W.	3.5kg
Input	DC12V (DC) 1A/1A/2A (Wifi version: DC12V (DC) 2A/2A/2A)
Power	8W
Coverage	400m ² / 1200m ³
Bottle	500ml
Material	Metal, Acrylic


Included accessories:




PTFE tape: 1. Tie up / twine the atomized core when changing to a new one on the machine.

2. Twine the connector when screwing to the machine.

Component overview:

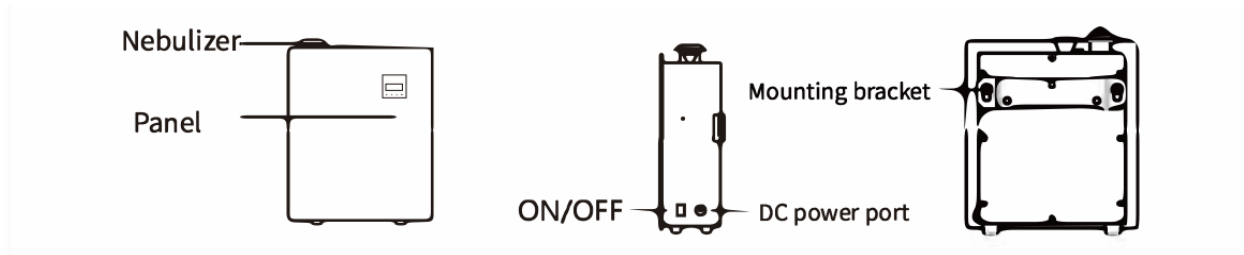

Panel Description

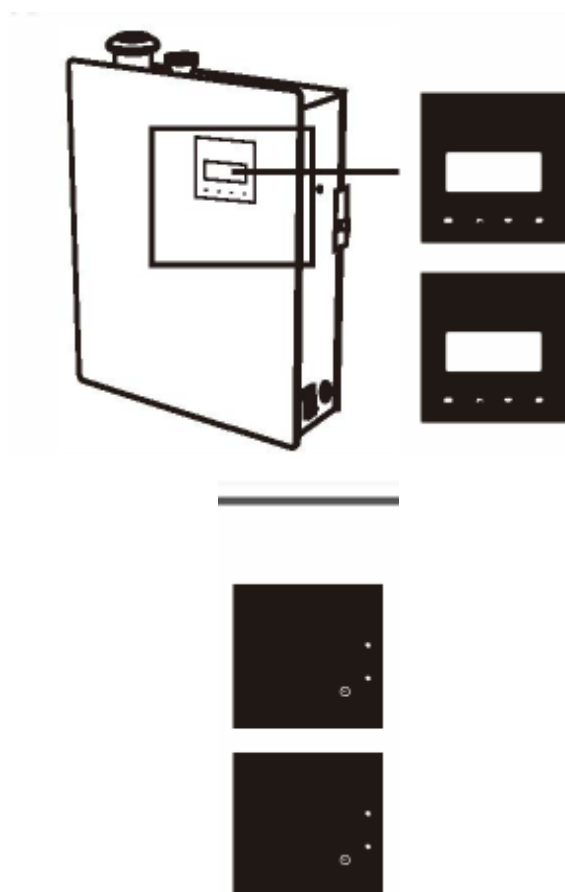

LCD version:

See panel operation for details.

LCD + Bluetooth version:

See panel operation for details.


Wifi + Bluetooth version:

Configuration: long press the button for 3s to configure the network. Long press for 6s to restore factory setting.


Bluetooth version:

Reset: long press the button to restore factory setting.

Installation Steps

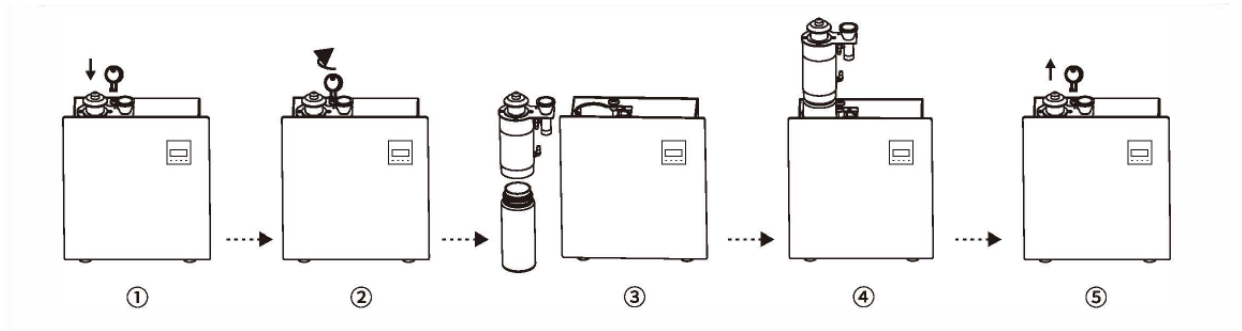

1. Insert the key.
2. Rotate the key 10 degrees clockwise to unlock.
3. Unscrew and take out the atomized head, fill in the fragrance.
4. Insert the atomized head and bottle.
5. Take out the key.

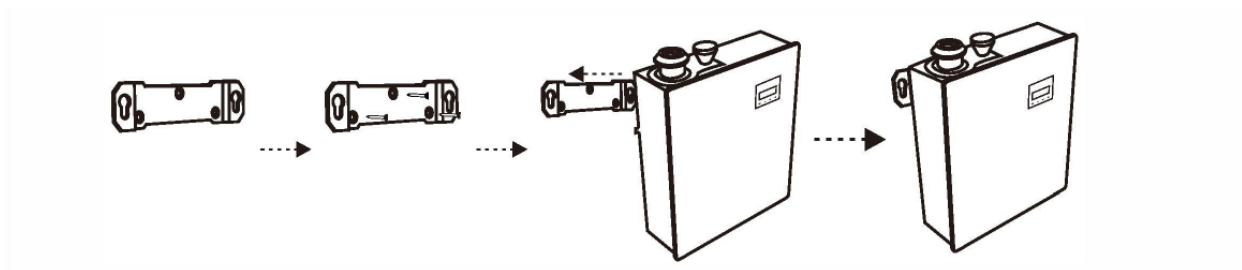

1. Mark the bracket holes, drill holes at the marks, and install the wall anchors.
2. Screw the bracket to the wall, then hang the machine on it.

Warning

-  Shall not modify, disassemble or repair the machine arbitrarily. Any failure happens, please contact relevant technician in time.
-  Shall not damage the power cord, force to bend, yank, heavy load, clip or reprocess.
 - Shall not use the AC plug when it is damaged or un-matched with the socket;
 - Shall not wet the machine or the AC plug;
 - Shall not use overloaden power socket, wire or broken plug.
-  Shall not touch the wire or product shell when thundering or/and lightening.
-  Shall not disassemble the machine when it is under operating.

Caution

- Atomization icon is displayed on screen but the machine does not diffuse when it is in a pause period.
- Touch / tap icons will not operate when the Diffuser is in lock status.
- If the display screen is not functioning normally, or displays unclear content or a program crash: reset the Diffuser by touching "ENT" for 5 seconds until it beeps.
- The Diffuser must be kept vertical at all times when fragrance is in the bottle. When lying flat, tilted or horizontal, the fragrance could overflow. This may affect Diffuser efficiency if the circuit board or pump becomes contaminated.

- After installation, please keep the machine vertical. Tilting or placing it flat may cause an oil overflow. Machine efficiency may be affected if the circuit board is contaminated.



Troubleshooting

Before asking to have the machine repaired, please try to diagnose the problem first using the instructions below.

Symptom	Remedy
Does not diffuse	- Check the power is on or off; - If the machine is in "not working period", it stops diffusing; - The pump is damaged, change a new one.
Spray little	- Atomized nozzle may be blocked, clean with alcohol; - Pump is aging, change a new one.
Spray liquid	- Atomized nozzle is damaged, change a new one; - Machine is tilted or lying flat, please make it stand upright.
Oil spill	- Bottle is loose, screw it to the right place.
Abnormal sound	- Pump is loose, install it correctly.
No display on screen	- The power is off; - Plug is damaged, change a new plug; - Display screen is damaged, change a new one.

Cleaning diffuser

The Diffuser should be cleaned regularly. Recommended timing:

- When refilling / changing fragrance in the reservoir.
- When scenting strength becomes weak.
 - Turn off the Scenting Diffuser before cleaning.
 - Place a clean bottle with a small quantity of "Methylated Spirits" / industrial alcohol.
 - Turn on the machine and let it diffuse for 5 minutes.
 - Turn off power and unscrew the cleaning fluid bottle.
 - Replace with fresh fragrance — the machine is now ready for diffusing.


Bluetooth instruction

Where to get the app:


Please search "Scent Marketing" in Google Play or the App Store.

Note:

- Please make sure that the Bluetooth function is turned on.
- Please make sure that the location function of the mobile phone is turned on.

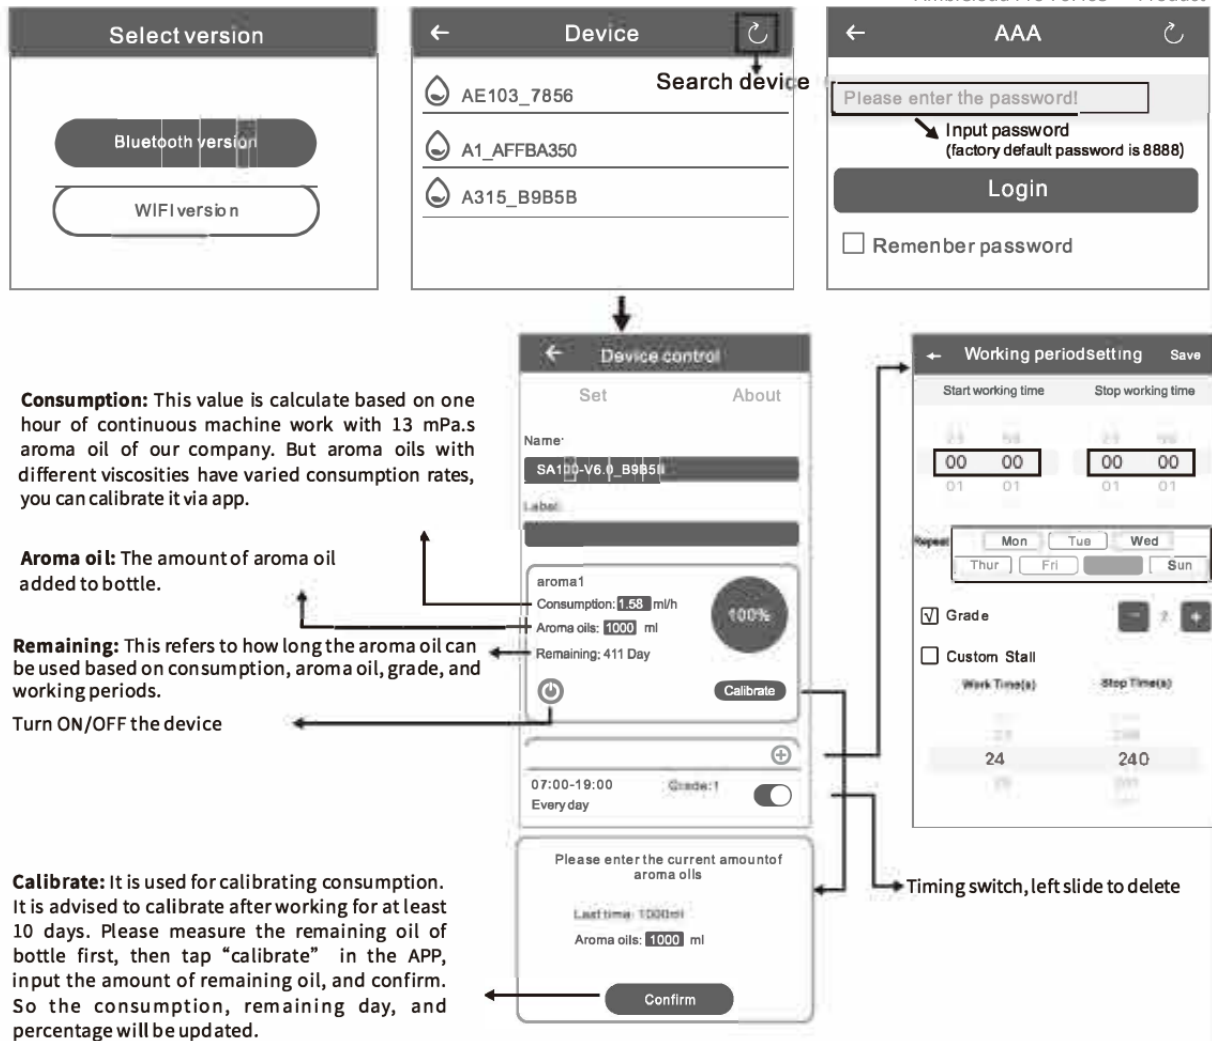


Amend password

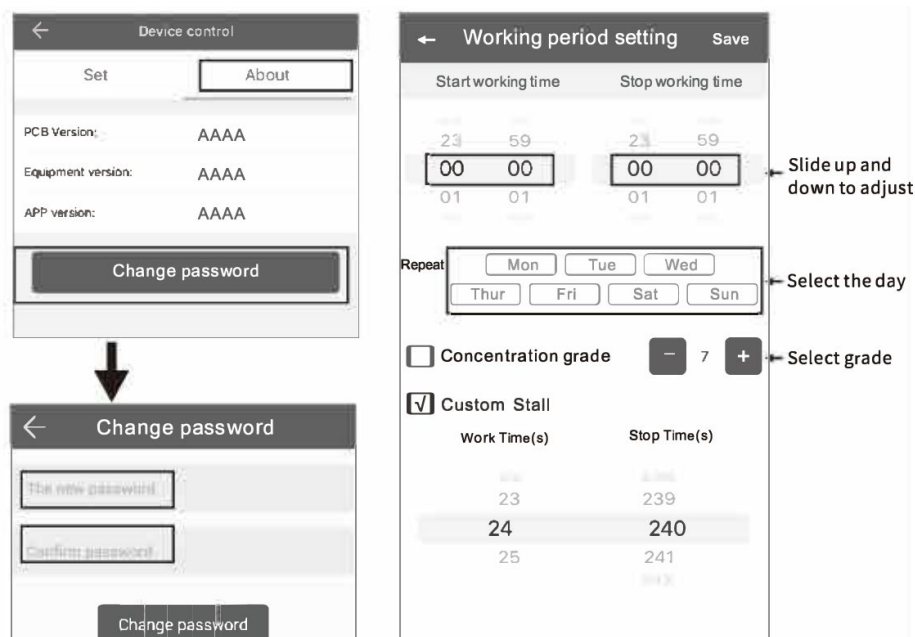

If you forget the password, please press and hold the ENT button for 3 seconds to restore the password — the default password is 8888. Press and hold the ENT button for 6 seconds to restore the default setting.


Wifi instruction

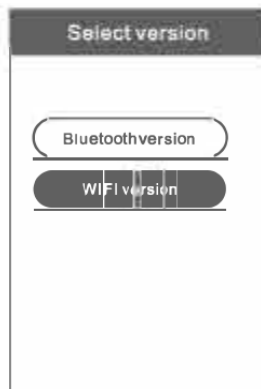

Open the APP, Select WIFI.



New users can sign up, via phone number or email address.

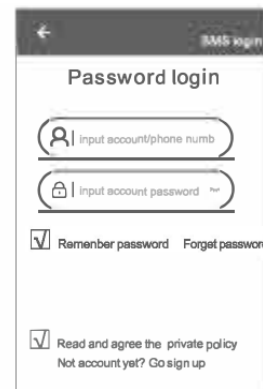


You can Log in via account name and password.




If you forget the password, enter your mobile phone number or email address for verification.




You can reset the password.

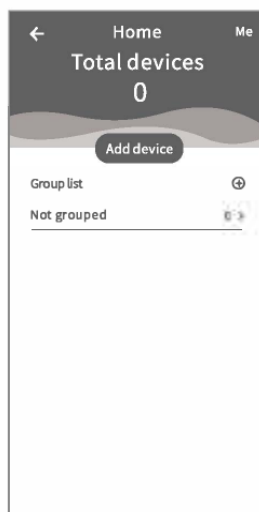


Add Devices.

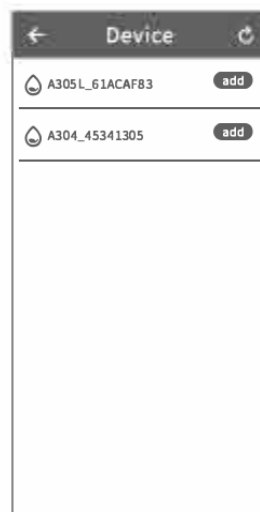


Select the device to be added

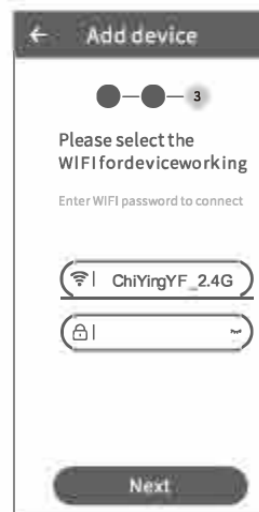


Enter WIFI password, then click "Next" to start connecting only support 2.4G WIFI.

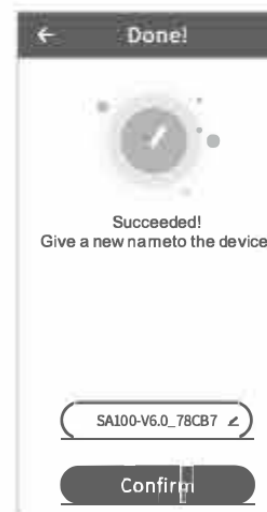

After successful configuration, user can give a name to the machine.

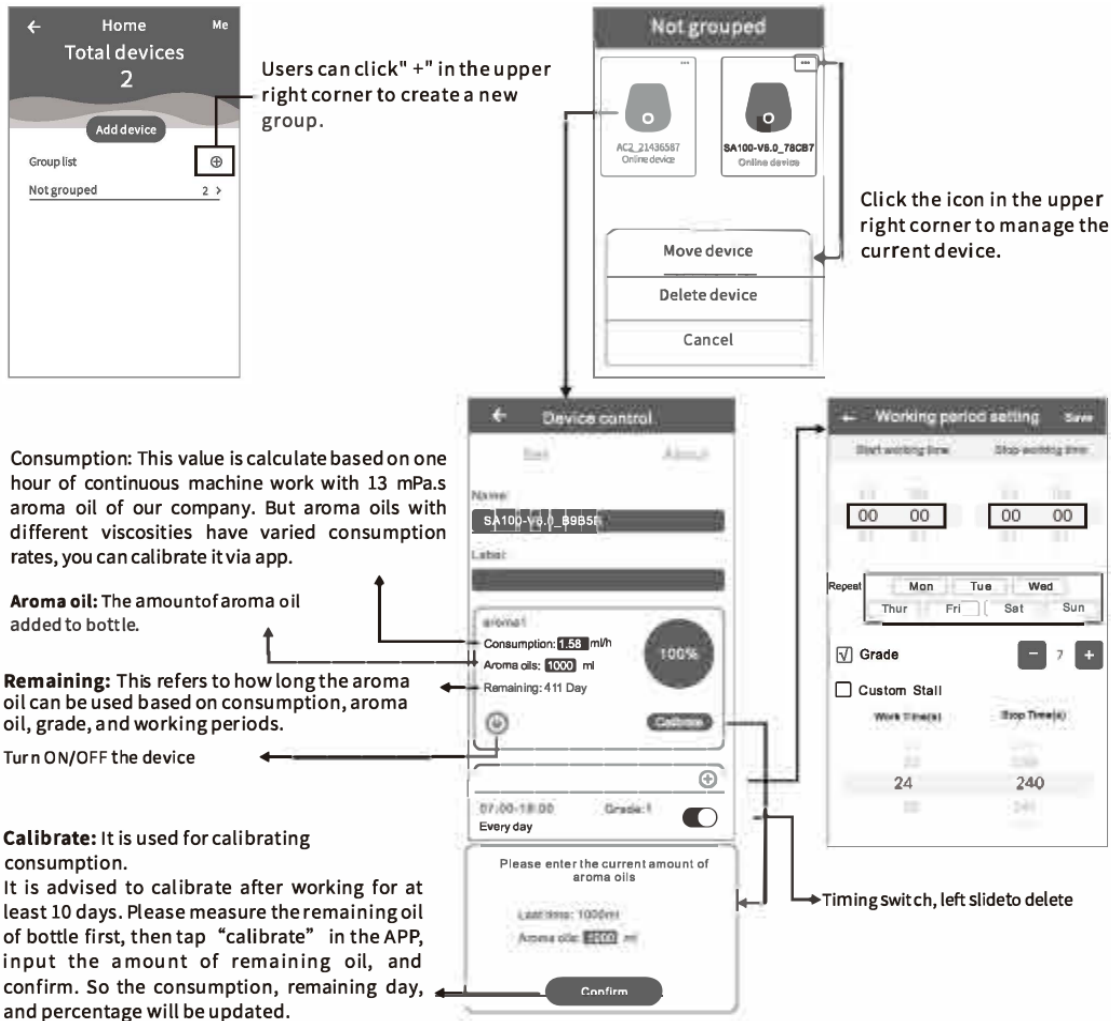

LCD time setting

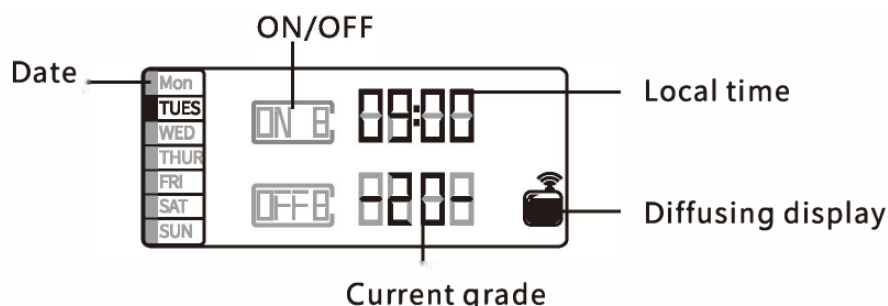

Power on/off

Connect the power supply; power on with a sound "beep", and the screen displays the initial time and current grade. The screen will turn off when the power is disconnected.

Auto-lock and un-lock

The buttons will lock automatically if there is no further manual manipulation within 60s. Touch SET (about 5s) — a sound "beep" is heard and the screen lights up to unlock the machine.

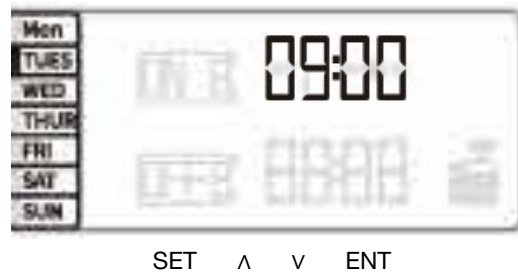


Figure 1

Local time setting

Touch the SET button (about 3s) until a "beep" sounds, for day setting; touch ▲ or ▼ to adjust the day. Touch the ENT button for local time setting, then touch ▲ or ▼ to adjust the time (Figure 1).

Concentration grade setting

There are 20 grades available. Touch ▲ to increase the grade, touch ▼ to decrease the grade (Figure 2).



Figure 2

Work time period setting

There are 5 working periods available, to be set for every day (Figure 3). Touch the SET button to set the working period (ON1); touch ▲ or ▼ to choose the working period (1–5). Touch the ENT button for the working-period switch, touch ▲ or ▼ to choose ON or OFF, then touch the ENT button again to move to the operation time and touch ▲ or ▼ to adjust the number. Touch ENT again for the grade.

Next, touch ENT to choose the day (MON): touch ▲ to turn on the working period (ON1) (Figure 4), touch ▼ to turn off the working period (OFF1) (Figure 5).

Touch ENT to move to the next day and repeat the steps for TUES through SUN.

Once finished, touch SET to confirm and exit. Repeat the same setting steps of ON1 for ON2, ON3, ON4 and ON5.

PS: A grade display of "-Cu-" indicates a customized grade set via the app only (Figure 6).

The machine does not work when the start working period is the same as the stop working time.

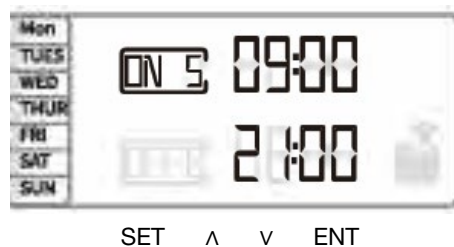


Figure 3



SET $\wedge$ $\vee$ ENT

Figure 4



SET $\wedge$ $\vee$ ENT

Figure 5



SET $\wedge$ $\vee$ ENT

Figure 6

Working time period	00:00 00:00	00:00 00:00	00:00 00:00	00:00 00:00	00:00 00:00
Mon	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Thues	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Wed	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Thur	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Fri	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Sat	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Sun	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF

(PS: The first working period has factory defaults with start working time 07:00 and stop working time 19:00, Grade 1. The rest are all 00:00.)